




















CCS8 « Basic » Program

Reference :26127


		<h2>Fonctionnement</h2>	
SWITCHING ON SYSTEM	<ul style="list-style-type: none"> Pressing any button activates the system 		
	<ul style="list-style-type: none"> Pressing this button automatically switches off the system 		
AUTOMATIC SWITCH OFF	<ul style="list-style-type: none"> The system automatically switches off if the voltage drops under 11,5V 		
	<ul style="list-style-type: none"> Pressing this button once activates the AUXILLIARY N°1 Output. 		
	<ul style="list-style-type: none"> Pressing this button once activates the AUXILLIARY Output N°2. 		
	<ul style="list-style-type: none"> Pressing this button once activates the AUXILLIARY Output N°3 and the command output connected to the ground « Addition to Aux 3 » 		
	<ul style="list-style-type: none"> Pressing this button once activates the AUXILLIARY Output N°4 and the command output connected to the ground « Addition to Aux 4 » 		
	<ul style="list-style-type: none"> Pressing this button once activates the AUXILLIARY Output N°5. 		
	<ul style="list-style-type: none"> Pressing this button once activates the AUXILLIARY Output N°6 		
	<ul style="list-style-type: none"> Pressing this button once activates the AUXILLIARY Output N°7 		
	<ul style="list-style-type: none"> Pressing this button once activates the AUXILLIARY Output N°8 		
	<ul style="list-style-type: none"> A power output is available once the system is activated to provide power for a radio connection. 		

LOW BATTERY ALARM




The low battery alarm goes off when the threshold drops below a level of 11.8 volts (12 volt vehicles) or a level of 23.6 volts (24 volt vehicles).

Equipment Wiring diagram

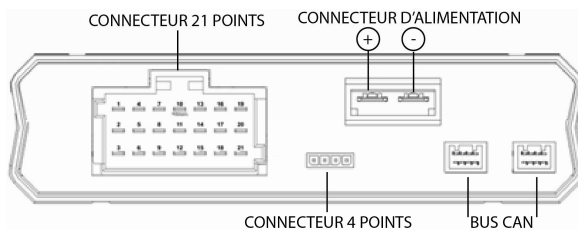

AUXILLIARY 1		15A	15 (+)	12 (-)
AUXILLIARY 2		15A	21 (+)	18 (-)
AUXILLIARY 3		3A	1 (+)	2 (-)
AUXILLIARY 4		3A	4 (+)	5 (-)
AUXILLIARY 5		3A	7 (+)	8 (-)
AUXILLIARY 6		3A	13 (+)	14 (-)
AUXILLIARY 7		3A	16 (+)	17 (-)
AUXILLIARY 8		3A	19 (+)	20 (-)
6A Power supply (> RADIO)		6A	9 (+)	8 (-)
AUXILLIARY 4 (ground connection limited to 100mA)		Masse -0,1A	10 (-)	
AUXILLIARY 3 (ground connection limited to 100mA)		Masse -0,1A	11 (-)	

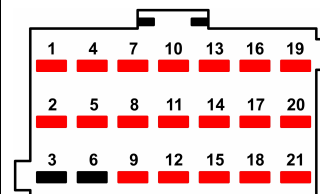

21 PIN CONNECTOR